LOWER OVEN PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

24" BUILT−IN ELECTRIC
DOUBLE OVEN
STD−CLEAN LOWER
SELF−CLEAN UPPER

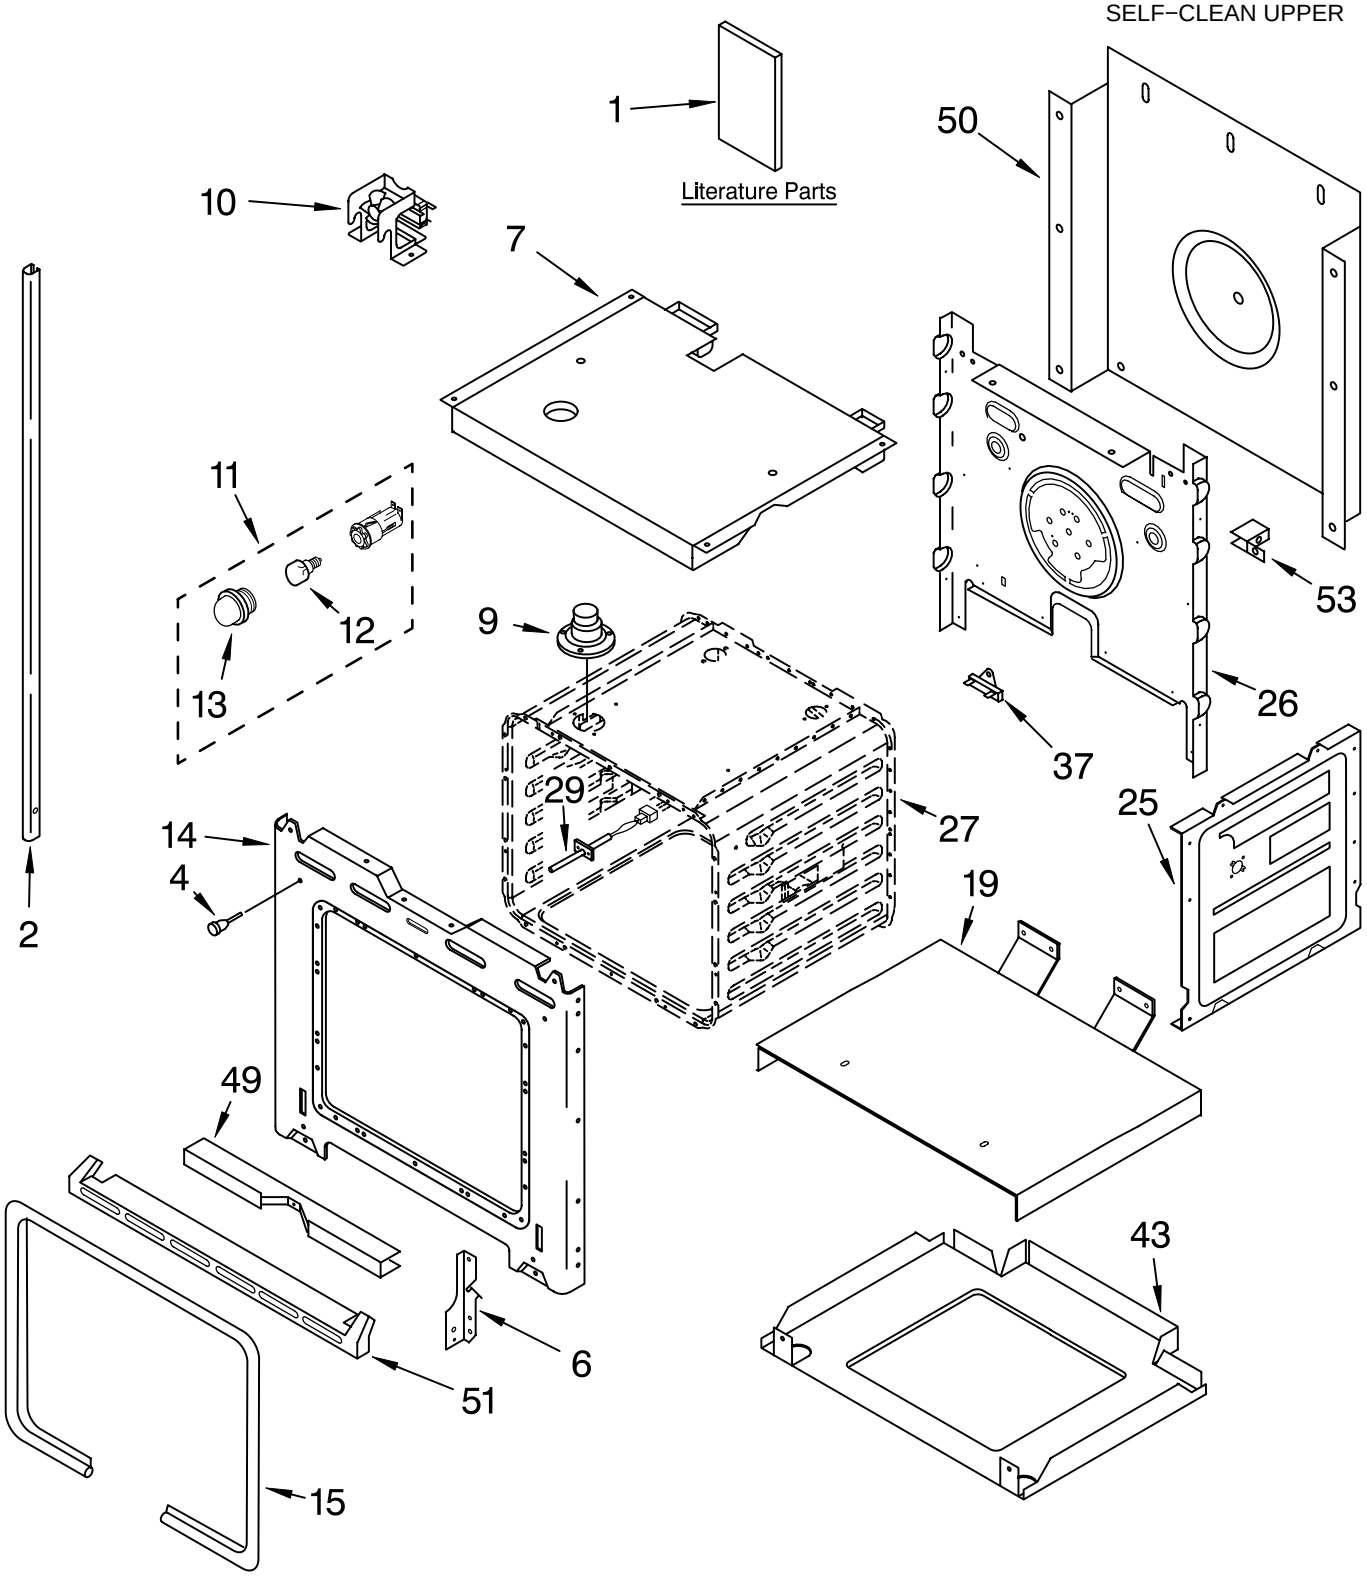

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER OVEN PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8300656	Installation Instructions
	8300772	Use & Care Guide (Oven)
	8302068	Tech Sheet
	3191638	Safer Cooking Tips
2		Trim, Side
	4450850	RH Black
	4450851	RH White
	4452122	RH Biscuit
	4450853	LH Black
	4450854	LH White
	4452123	LH Biscuit
		Screw
	4449747	Black Model
	4449041	White
4	4448520	Bumper, Door
6		Receiver, Hinge
	4455605	Left Hand
	4455606	Right Hand
7	4455863	Top Chassis
	4449809	Screw
9	4452159	Tube, Vent
	3196176	Screw
10	4451664	Fan & Bracket Assy.
	4449809	Screw
11	4452368	Oven Light Assy
	4449809	Screw
12	4452166	Bulb, Light
13	4452165	Lens, Light
14	4455610	Frame, Front
	4449040	Screw
	4450118	Nut
15	4450491	Gasket, Door
19	4451476	Support, Insulation
25	4455641	Side, Chassis
		(R.H. & L.H.)
	4449809	Screw
26	4452232	Back, Chassis
	4449809	Screw
27		Liner, Oven
		(Not serviceable)
29	4455636	Sensor
	4449154	Screw
37	4451354	Fuse−Thermal
	4449809	Screw
43	4450525	Base, Chassis
	4449154	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51		Trim, Bottom
	4448473	Black Model
	4448474	White Model
	8300528	Biscuit Model
	4159465	Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449314	Insulation, Wrap
4450363	Insulation, Back

UPPER OVEN PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

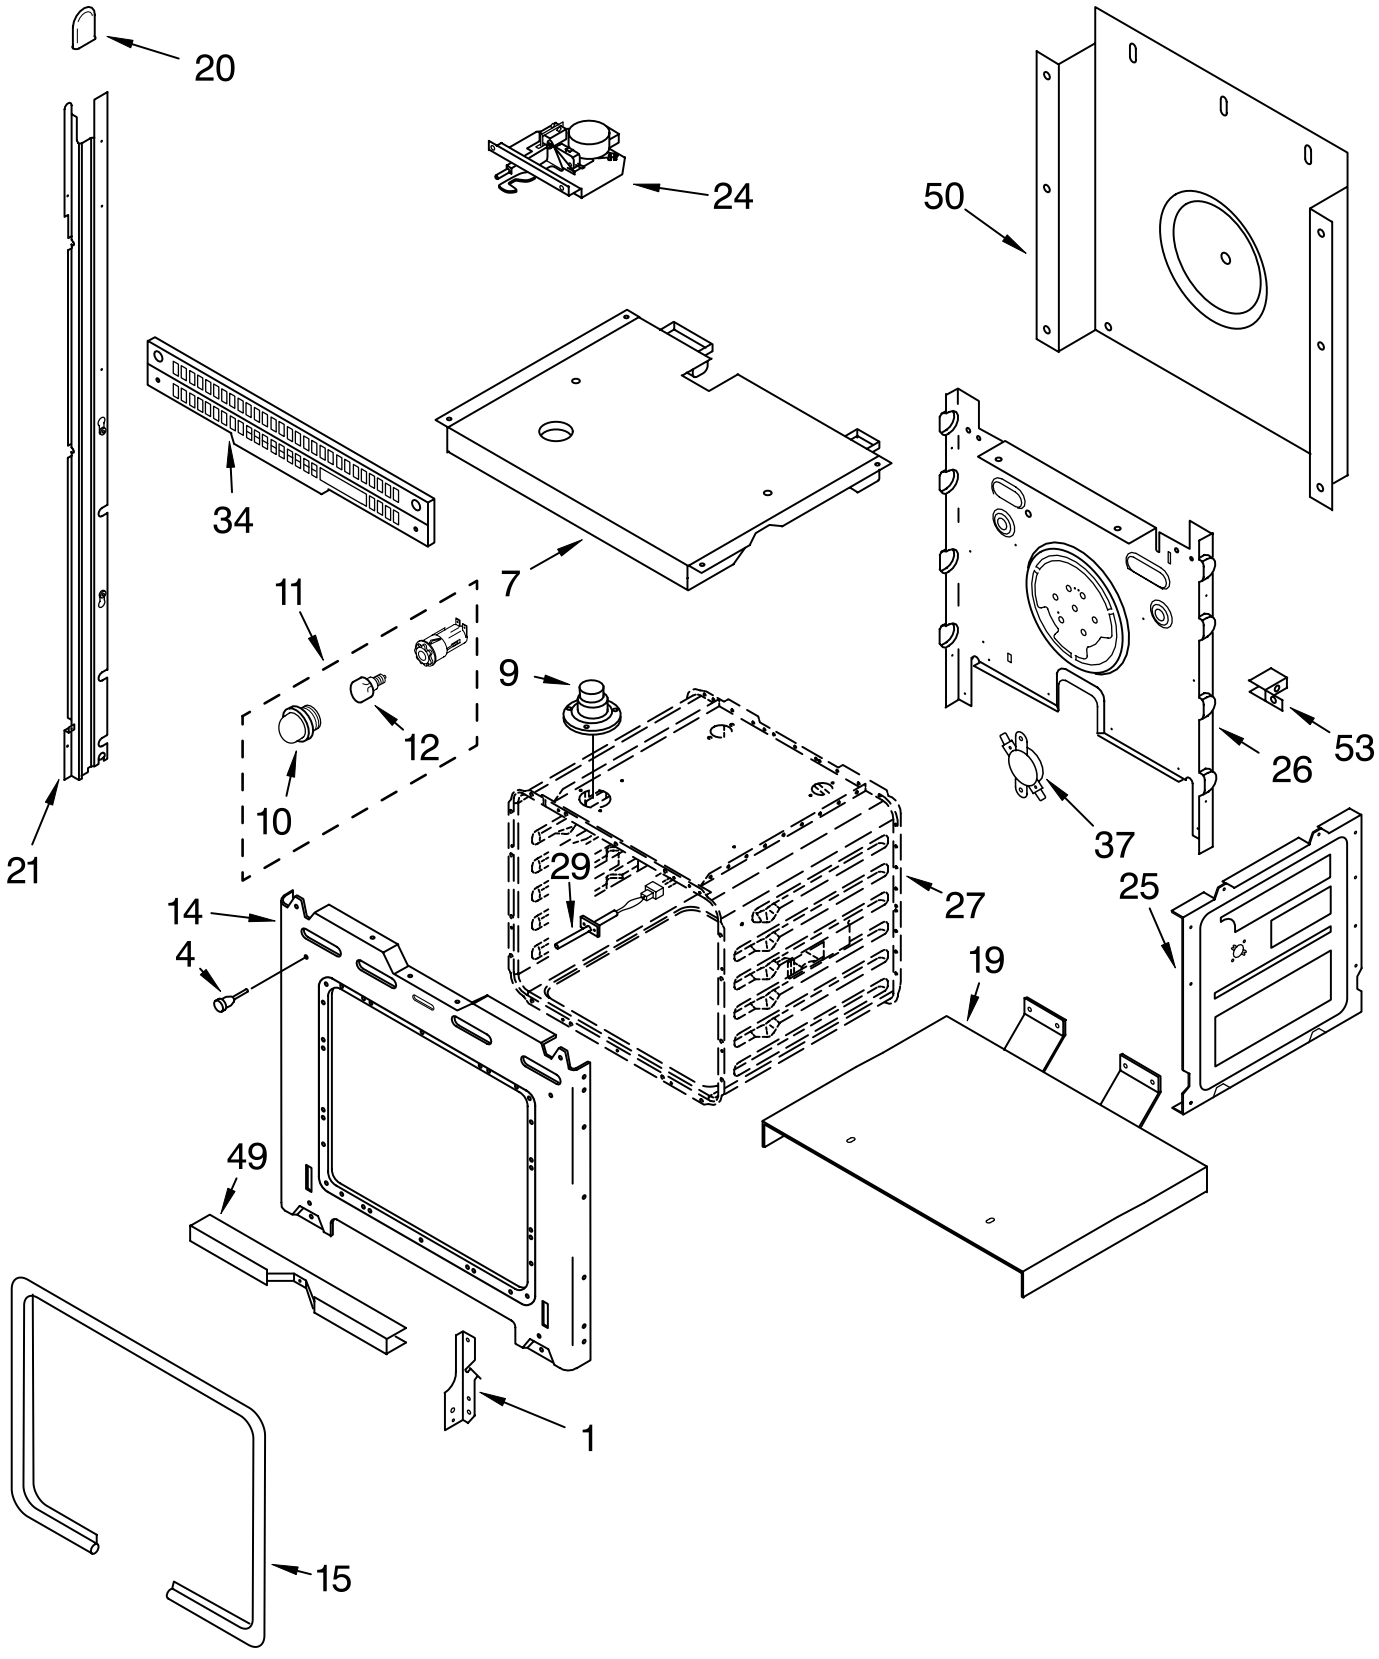

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1		Receiver, Hinge
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
7	4455863	Top Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	4455610	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455380	Gasket, Door
19	4451476	Support, Insulation
	4449809	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	4450581	Right Side
	4450582	Left Side
	4448444	Grommet
	4449154	Screw
24	9759481	Latch Assy
	4449809	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452232	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
29	4455636	Sensor
	4449154	Screw
34	4452265	Vent, Center
37	9759243	Thermostat (TOD) (Temp.) SPST
	4449809	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449314	Insulation, Wrap
4450363	Insulation, Back

LOWER OVEN DOOR PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

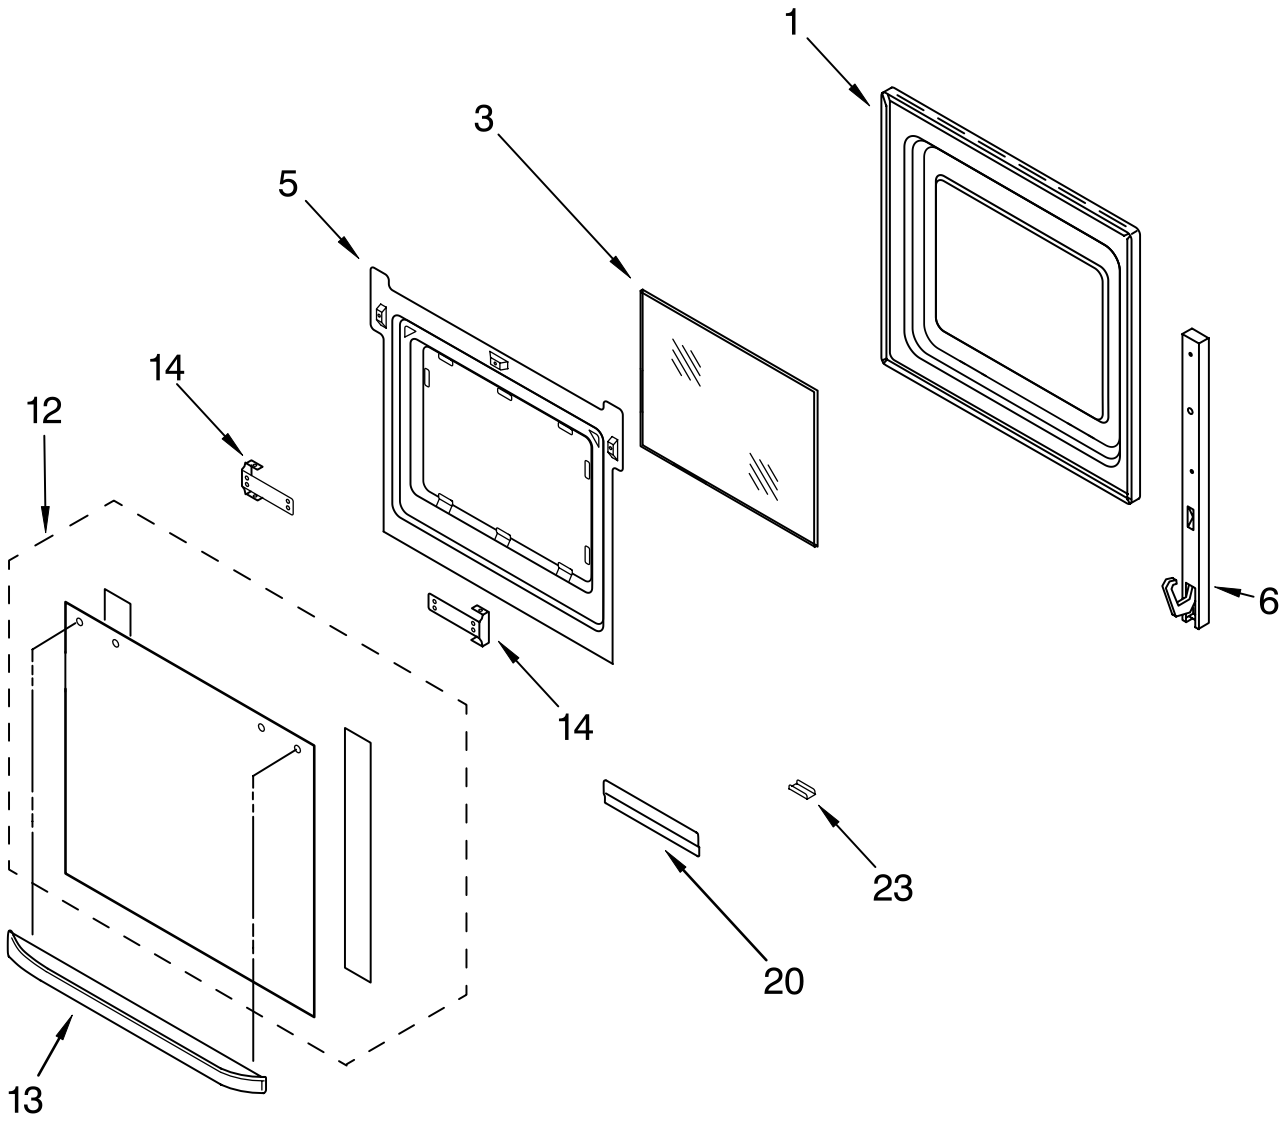

Illus. No.	Part No.	DESCRIPTION
1	4455616	Liner, Door
3	4449247	Glass, Inner
5	8300776	Retainer, Glass
	4449809	Screw
6		Hinge, Door
	8300780	Right Side
	8300781	Left Side
	4449743	Screw

Illus. No.	Part No.	DESCRIPTION
12		Door Glass, Assy
	8300917	Black Model
	8300916	White Model
	8300913	Biscuit Model
	9759071	S.Steel Model
13		Door Handle
	4448402	Black Model
	4448403	White Model
	8300512	Biscuit Model

Illus. No.	Part No.	DESCRIPTION
14	4450813	Bracket, Handle
	4451040	Screw
20	4450863	Retainer, Glass
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER OVEN DOOR PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

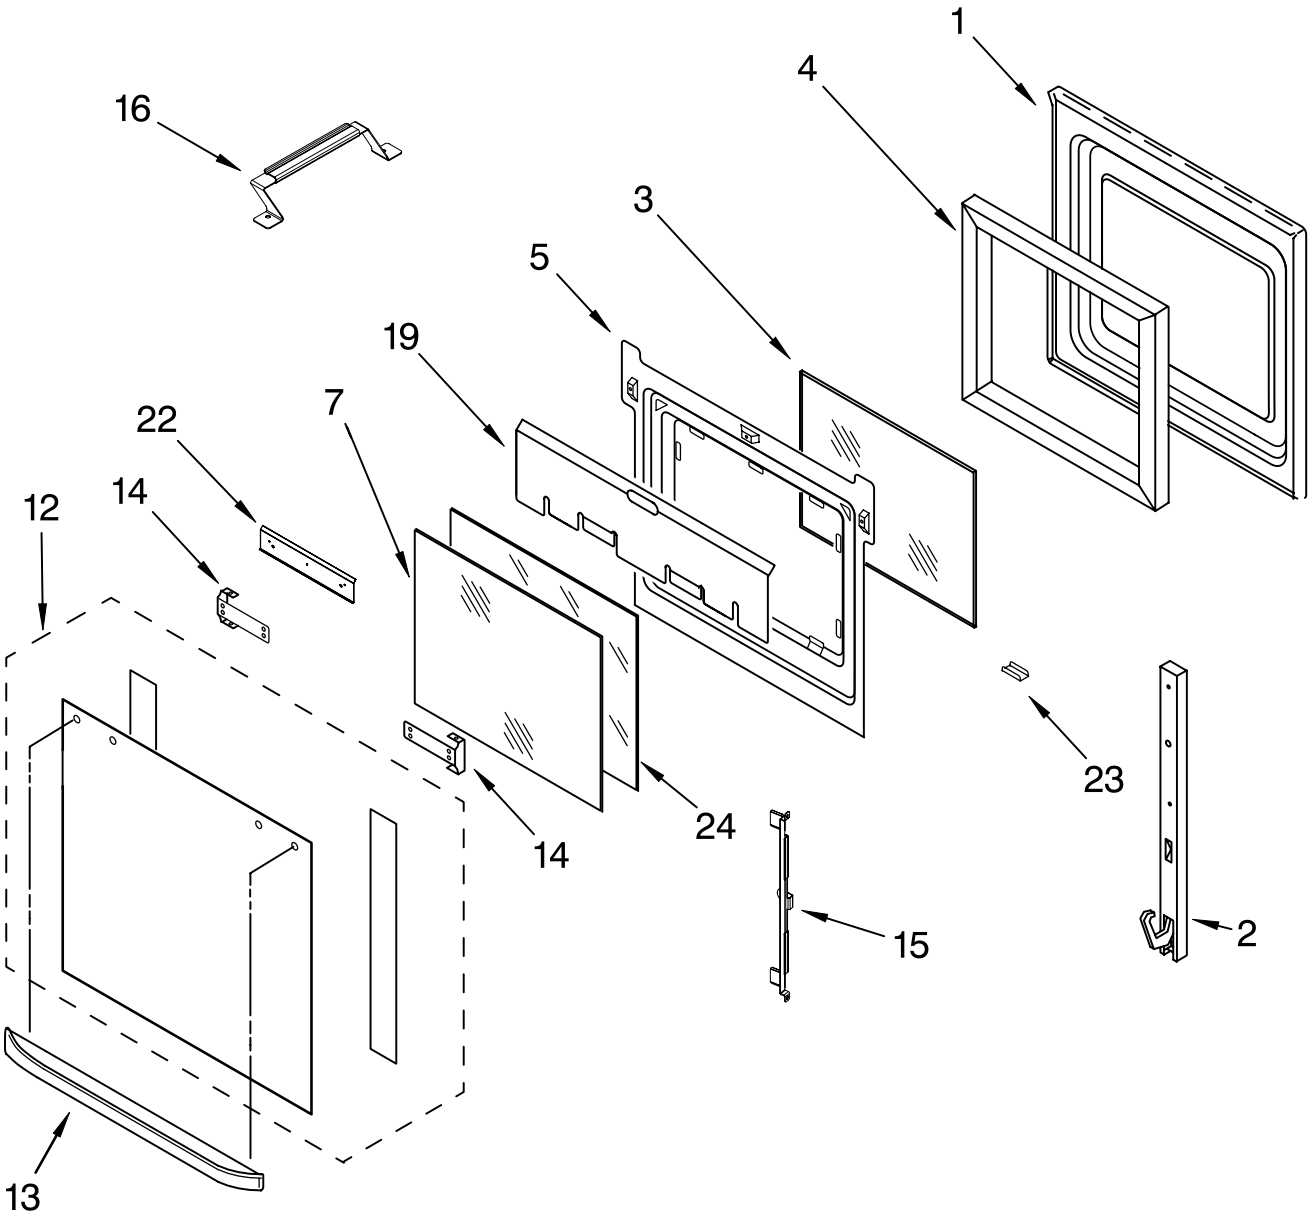

Illus. No.	Part No.	DESCRIPTION
1	4455616	Liner, Door
2		Hinge, Door
	8300567	Right Side
	8300568	Left Side
	4449743	Screw
3	4449247	Glass, Inner
4	4451720	Insulation, Door
5	8300776	Retainer, Glass
	4449809	Screw
7	9759223	Glass, Inner
12		Door Glass, Assy
	8300917	Black Model
	8300916	White Model
	8300913	Biscuit Model
	8300997	S.Steel Model
13		Door Handle
	4448402	Black Model
	4448403	White Model
	8300512	Biscuit Model
14	4450813	Bracket, Handle
	4451040	Screw
15	9759229	Bracket(2nd Glass)
16	9759230	Bracket(3rd Glass)
19	4457101	Shield, Heat
	4449809	Screw
22	4457112	Shield, Heat (Btm)
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model
24	9759226	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

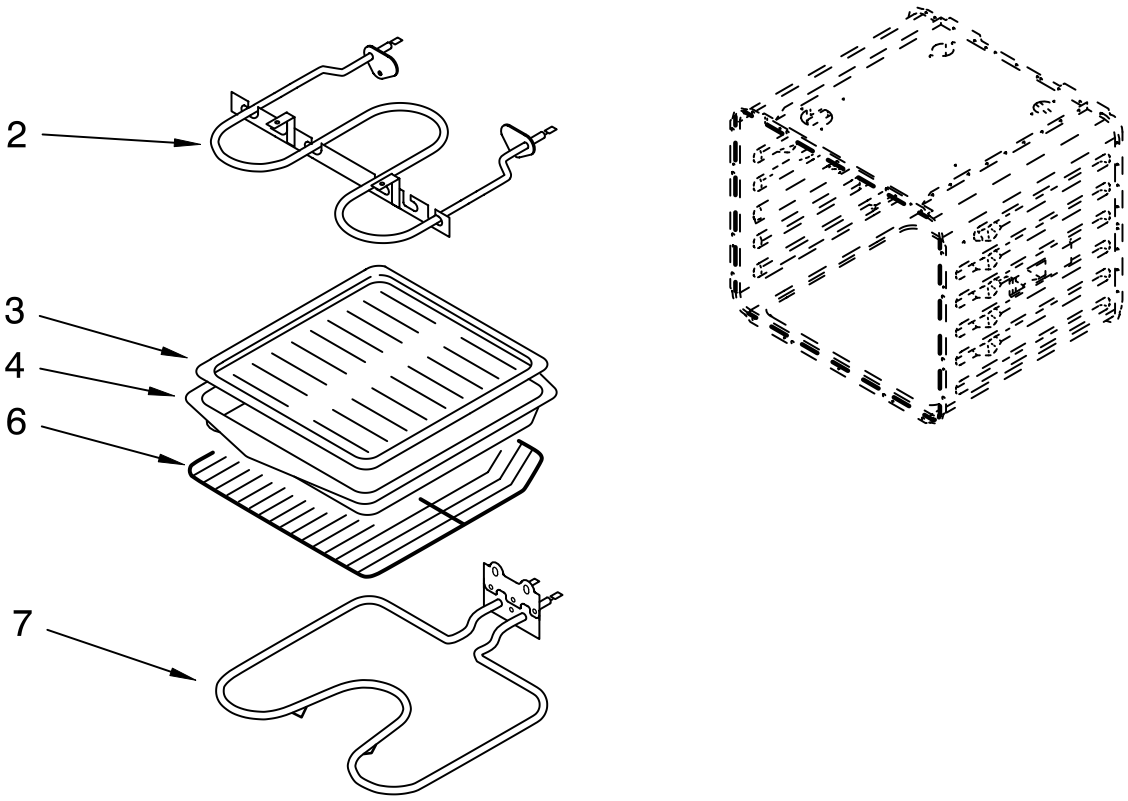

Illus. No.	Part No.	DESCRIPTION
2	4456103	Element, Broil
	4449154	Screw
3	3195996	Grill, Broiler
4	3196076	Pan, Broiler
6	4448716	Rack, Oven
	9759322	Pad, Rack
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

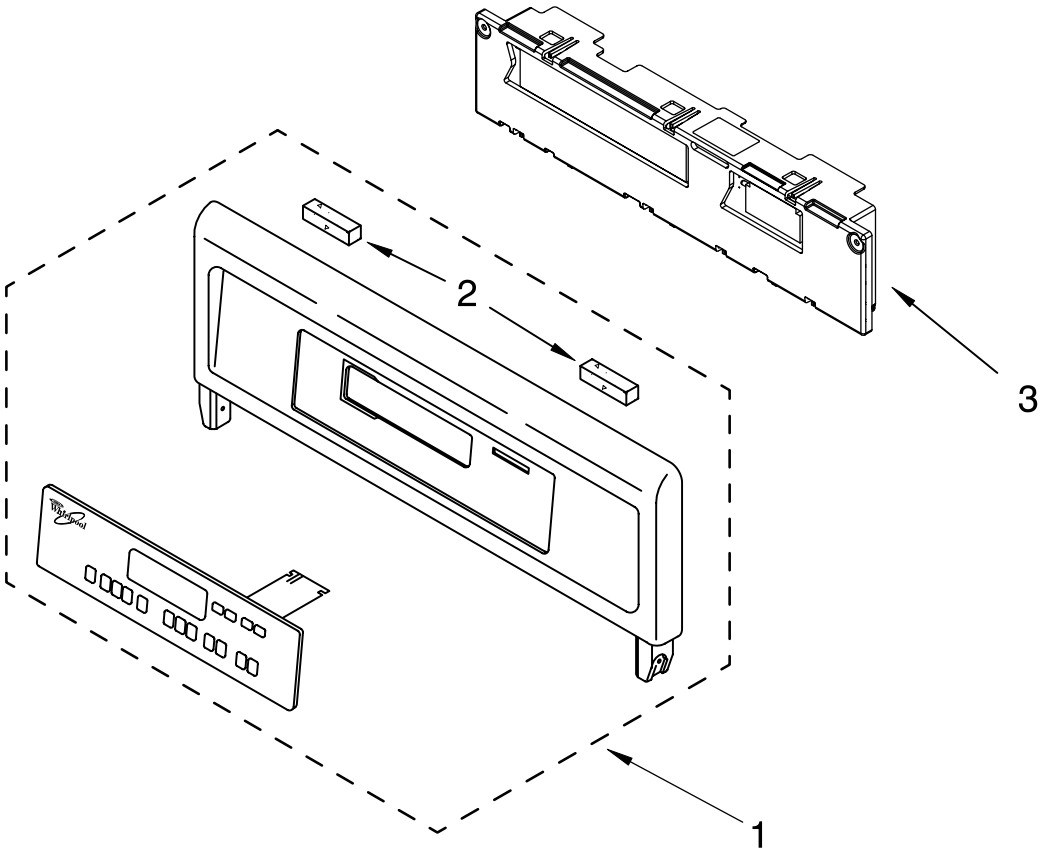

Illus. No.	Part No.	DESCRIPTION
1		Control Panel Assy. W/Membrane Switch
	8300427	Black Model
	8300428	White Model
	8300516	Biscuit Model
	8281179	Screw
2	4451032	Gasket, Control Panel
	3400832	Screw
3	8302319	Assy, Control
	8301848	Latch, Sister Board
	4449745	Screw
	3400832	Screw

TOP VENTING PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

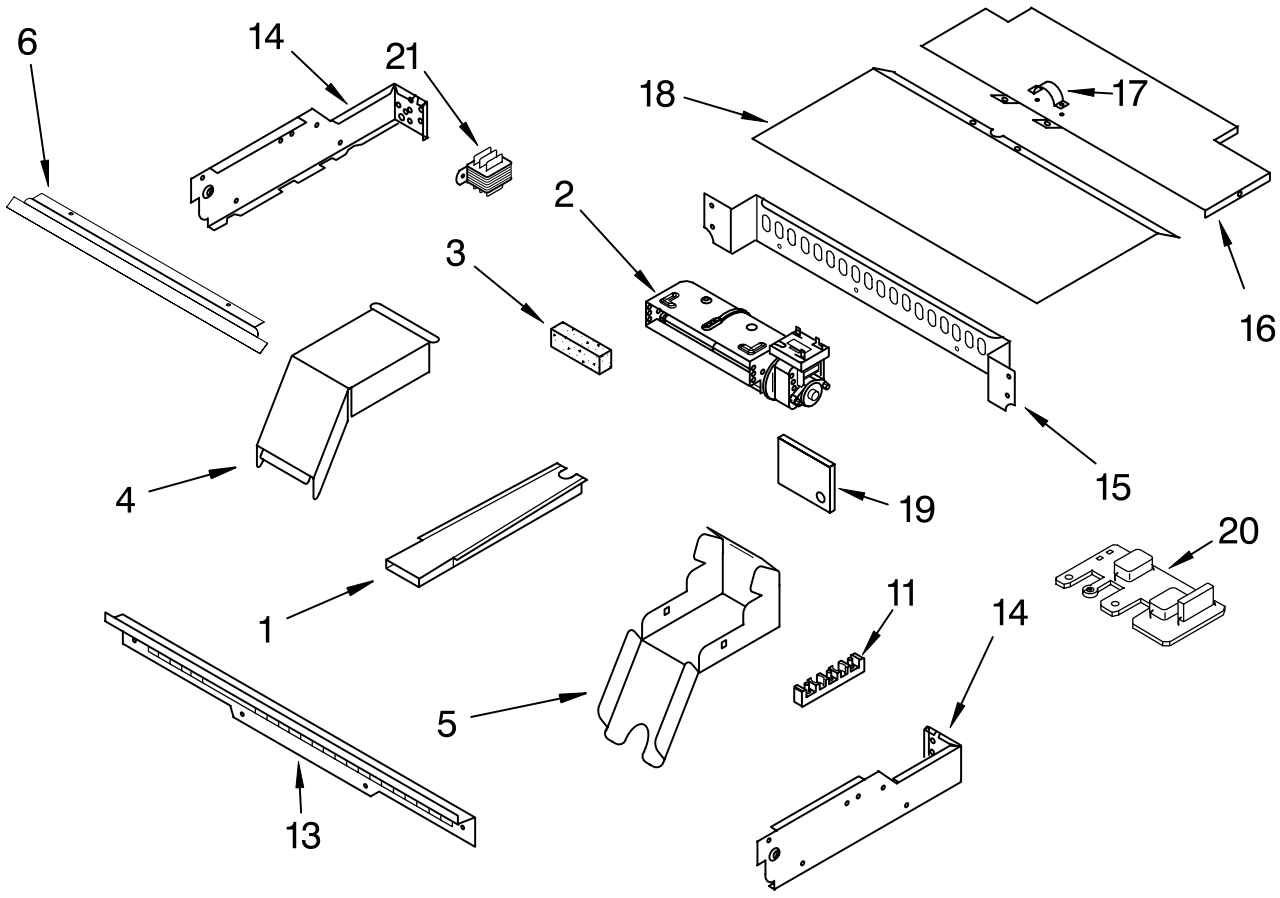

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4457289	Blower
	4449809	Screw
3	4451758	Foam, Block
4	4455178	Elbow, Vent−Top
5	4455177	Elbow, Vent−Bottom
6	4457115	Deflector, Bottom Vent
11	4449868	Block, Terminal
	3400080	Screw

Illus. No.	Part No.	DESCRIPTION
13	4448547	Vent, (Control Panel)
	4450038	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
	4449154	Screw
15	9759135	Back, Control
	4449809	Screw

Illus. No.	Part No.	DESCRIPTION
16	4450549	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
	112432	Nut
18	4452365	Cover, Top Front
	4449809	Screw
19	4454943	Plate, Fan
20	8302143	Suppressor
21	8300642	Transformer, Single Control

OPTIONAL PARTS

For Models:RBD245PDB15, RBD245PDQ15, RBD245PDT15,RBD245PDS15
(Black) (Designer White) (Biscuit) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	261869	Cord Brown
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
		SPLICING WIRES−−25FT. LENGTH
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
		WIRING HARNESS PARTS
	8301878	Harness, Wire STD (Main)
	4450953	Conduit, Double
	4450800	Screw
	4448664	Clamp
	4449809	Screw
	112432	Nut
	4452222	Spacer, Harness
	4454835	Tie, Cable
	4451761	Support, Wiring
	4454842	Tie, Cable
		Miscellaneous
	4448950	Screw, Install. 8−14 x 1" (4)
	814381	Pin Hinge Kit